

RECHARGEABLE ROTARY SHAVER



Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

CONAIRMAN™

Respect the Ritual™

SHV1600 Series

READ THESE SAFETY PRECAUTIONS CAREFULLY BEFORE USING THE UNIT! SAFETY PRECAUTIONS

WARNING: The polyethylene bags covering the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use over or near sinks, bathtubs, showers or other containers with water. Store the unit in a dry place.

1. If you are charging the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can be dangerous, even if the unit is switched off. To ensure additional protection, have a residual current device (RCD) with a nominal trip current no higher than 30 mA installed in your bathroom. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. Do not use the unit if it has fallen or if it appears to be damaged.
4. Do not leave the unit unattended when it is plugged in or switched on.

5. Turn off the unit immediately if you have problems when using it.
6. Do not use any accessories other than those recommended by Conair.
7. Turn off the unit after each use and before cleaning it.
8. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
9. Allow the unit to cool before storing.
10. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
11. To reduce hazards, damaged power cords must be replaced by the manufacturer or an authorized service center.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been supervised or instructed in the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. **This appliance is not a toy. Keep away from children.**

PRODUCT FEATURES



TROUBLESHOOTING

If your rechargeable shaver does not seem to be taking a charge, take the following troubleshooting steps before returning it for repair:

1. Be sure the electrical outlet is working by plugging in another appliance to test the outlet.
2. Make sure the electrical plug is not connected to a switch that turns power off when lights are turned off.

OPERATING INSTRUCTIONS

BEFORE USE

1. When using the shaver for the first time, charge continuously for at least 12 hours for a full charge. Shaver can be operated for approximate 35 minutes with a full charge.
2. Subsequent charges should be 8 hours.
3. Preserving the batteries: In order to maintain the optimum capacity of the rechargeable batteries, the trimmer should be recharged for 12 hours approximately every 6 months.

BASIC INSTRUCTIONS FOR USE

1. Men whose skin is sensitive or easily irritated by shaving, or who suffer from a skin allergy, should test one section on the leg or arm before using the shaver.
2. Remove the cover and turn on the unit to start shaving. It is strongly recommended to start shaving from neck area, which is more sensitive (it is better to do shaving with cool head in that area).
3. Move the unit very smoothly and slowly against the direction of your natural hair growth.

4. Do not push the shaver on the skin too hard as it could cause irritation, make the shaver warm and prevent a perfect shave.

5. Please note that it takes 2 to 4 weeks for your skin to adapt to shaver, so please do not change shaving instrument in this period of time.

NOTE: To switch unit on, press down on safety lock button and then slide the On/Off switch.

SIDEBURN TRIMMER

On the back of the shaver there is a pop-up trimmer particularly suited for trimming sideburns or areas of your beard that you do not wish to shave completely.

To use the sideburn trimmer:

- When the shaver is ready to operate, push trimmer release button downward to release trimmer.
- Switch the shaver on by sliding the On/Off switch.
- **TIP:** Hold the blades of the sideburn trimmer at a right angle to the area of skin concerned. To shorten sideburns, first comb them in the direction of growth of the hair. Here again you should hold the blades at a right angle to the head, so that they touch the skin lightly and cut the sideburns by moving the shaver down away from the desired bottom edge of your sideburns.
- Switch the shaver off after every use (and where necessary, unplug it from the outlet). Press the sideburn trimmer back down to its original position and clean the shaver.



USER MAINTENANCE INSTRUCTIONS

TAKING CARE OF YOUR SHAVER

 
NOTE: When cleaning your shaver, make sure the unit is turned off and disconnected from the adapter.

CAUTION!

- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- The shaver should not be used until it is completely dry.



Daily Maintenance:

1. Press the release button on the front of shaver and open the head assembly (see Fig. 1).
2. Tap out excess hair shavings (see Fig. 2).

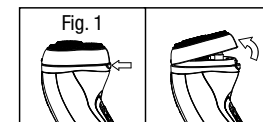




3. Use cleaning brush to brush away any remaining debris (see Fig. 3).

  4. Snap the head assembly closed (see Fig. 4).

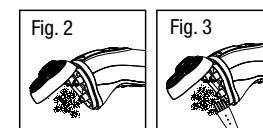

Weekly Maintenance:

   1. Repeat steps 1 – 3 from the Daily Maintenance cleaning steps.
2. Remove the cover from the hair pocket assembly (see Fig. 5). Place the body of the shaver aside to ensure that it will not get wet.
3. Rinse the head of the shaver under running water. Thoroughly rinse away any debris from the inner and outer cutters (see Fig. 6). NEVER submerge the shaver in water.

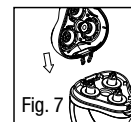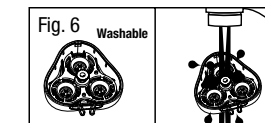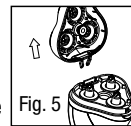

4. Leave head open for drying.
5. Align the spring hinge into the slot at the back of the hair pocket and press into place. Snap the head assembly closed (see Fig. 7).

BATTERY SAFETY INFORMATION

1. This device requires two Ni-MH batteries.
2. Batteries are not to be removed by the consumer unless instructed by the manufacturer.
3. Since batteries are sensitive to high temperatures, when storing them, keep the device in a cool dry place.
4. Never put batteries into a fire.
5. Switch off devices after use.
6. Keep batteries away from children, especially the batteries that are small enough to ingest.
7. If a battery is ingested, seek immediate medical help.
8. Never open, crush, puncture or disassemble batteries.
9. Dispose of batteries according to any State and Local regulations.
10. Do not dispose of rechargeable batteries as solid waste.

CAUTION

NEVER allow the power-supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Store your appliance out of reach of children, in a safe and dry location. Do not jerk or strain cord at plug connections.

ARGENTINA WARRANTY

Congratulations! You have purchased a guaranteed CONAIR product.

Warranty conditions:

1. **The warranty is valid for 12 months from the date of purchase. To make it effective, you must submit the purchase invoice, which must be within the warranty period.**
2. The warranty only applies to proven manufacturing defects. The product will be inspected and will be exchanged and/or repaired free of charge only if it presents an electrical or mechanical manufacturing defect within the warranty period.
3. The warranty does not apply:
 - 3.1 If the product has been opened, disassembled or repaired by unauthorized personnel.
 - 3.2 If the product has been used other than for domestic/household use, and/or for purposes for which it has not been designed.
 - 3.3 If the damages are not manufacturing defects but damages caused by impact, spills or spill residues on parts, insects, or any other external factors, as demonstrated during inspection; as well as damages caused by misuse, contrary to what is stated in the instruction manual.
 - 3.4 If the damages or failures were caused by accidents, unforeseen or deliberate causes, electric shocks, voltage fluctuations and/or voltage 10% greater or lesser than the one indicated on the product's rating plate.
 - 3.5 If the damages or failures were caused by accessories and parts broken or damaged during improper use of the product.

WE RECOMMEND THAT YOU READ THE INSTRUCTION MANUAL.

IMPORTANT: KEEP YOUR PURCHASE RECEIPT. ONLY ARTICLES ACCOMPANIED BY THE INVOICE/RECEIPT FROM THE STORE WHERE THE ITEM WAS PURCHASED WILL BE ACCEPTED.

Customer Service: Conair
0810-888-2847 and 5300-5823
Hours of operation: 8 am to 8 pm

CHILE / PERU / AL CERTIFICATE OF WARRANTY

Congratulations! You have purchased a guaranteed CONAIR product. Conair and its brands, Cuisinart, Waring and CONAIR, extend the following service warranty, which entitles you to enjoy all the advantages that our network of Authorized Technical Services provides. Terms and Conditions of the Certificate of Warranty:

1. The warranty is valid from the date of purchase. To make it effective, the customer must present a proof of purchase and the Certificate of Warranty.
2. The warranty only applies to proven manufacturing defects. The product will be inspected and will be exchanged and/or repaired only if it presents an electrical or mechanical manufacturing defect.
3. The warranty does not apply:
 - 3.1 If the product has been opened, disassembled or repaired by unauthorized personnel. The product should only be repaired by the network of Authorized Service Technicians.
 - 3.2 If the product has been used for purposes for which it has not been designed.
 - 3.3 If the damages are not manufacturing defects, e.g., impact damage, spill damage, insect damage or any other damages found during inspection. If the product has been misused, i.e., used contrary to what is indicated in the instruction manual.
 - 3.4 If the damages were caused by accidents, accidental or deliberate acts, or voltage 10% greater or lesser than the one indicated on the product's rating plate.
 - 3.5 If the damages are due to the normal wear of parts and/or accessories during normal use.
 - 3.6 If the damages were caused to accessories and parts during improper use of the product.

**We recommend that you read the instruction manual.

IMPORTANT! PLEASE KEEP THIS CERTIFICATE OF WARRANTY, STAMPED BY THE ESTABLISHMENT WHERE THE PRODUCT WAS PURCHASED. YOU WILL BE REQUIRED TO PRESENT IT FOR ANY CLAIM UNDER THIS WARRANTY.

MODELS #: SHV1600 SERIES

SERIAL #: _____

DATE OF PURCHASE: _____

INVOICE #: _____

THE WARRANTY PERIOD IS INDICATED ON THE PRODUCT BOX.

VENDOR'S NAME AND STAMP:

CLIENT'S SIGNATURE AND ID #

- SHV1600CL Chile 5.0 V --- 1.0 A
- SHV1600PE Perú 5.0 V --- 1.0 A
- SHV1600AR Argentina 5.0 V --- 1.0 A
- SHV1600AL Latino-América 5.0 V --- 1.0 A

RASURADORA
MARCA: CONAIRMAN
HECHO EN CHINA



ADVERTENCIAS DE SEGURIDAD
LEER MANUAL ANTES DE USAR

Manual and product references also available at: <http://www.conair.la>, <http://www.conair.com>



www.conairlatam.com

©2021 Conair LLC
Origen: China

Colombia

Importado por: Continente S.A.S.
Calle 69 # Via 40-301,
Barranquilla, Atl, Colombia
Línea Servicio al Cliente: 018000415385
sac@continente.com.co

Argentina

Importa Distribuye y Garantiza Newsan S.A.
Roque Pérez 3650-C1430FBX
C.A.B.A. República Argentina

Chile

Importado por : VENTIS SPA
El Estero 5533, Condominio El Estero,
Penalolen, Santiago, Chile.
TEL: +(569)78088043/ +569 9
61855284/+56975374879
RUT : 76229287-4

Perú

Importado y Distribuido por: MACROTEL S.A.C.
Av. Arequipa 4130 Dpto. 205 Miraflores, Lima, Perú.
RUC : 20546288979

21IP079686

IB-17353