NAIPO
FIND WELL-BEING

User Manual

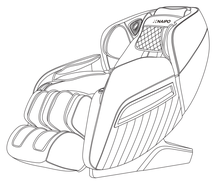

Massage Chair

Mode: MGC-A350

Company Name: Aukey International Limited
Company Address: P07-120 Huanan City Electronic Trading Building Longgang District, Shenzhen, China
Customer Service Email: support@naipocare.com
Web: www.naipocare.com

Made in China

Contents

English ..... 01~17
Deutsch ..... 18~34

材质：105g铜版纸
尺寸：105 x 148.5mm
印刷：单黑双面印刷
装订方式：骑马钉装订
（封面封底内页留白, 最后多一页留空白）

Thank you for purchasing the NAIPO MGC-A350 Massage Chair. Please read this use and care manual thoroughly and keep it in a safe place for future reference. If you need any assistance, please contact our customer support team.

IMPORTANT SAFETY INSTRUCTIONS:

DANGER - To reduce the risk of electric shock: Always unplug this massage chair from the electrical outlet immediately after use and before cleaning.

WARNING - To reduce the risk of burns, fire, electric shock or injury to persons:
►An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
►Unplug from outlet during thunder or lightening storms, and before putting on or taking off parts.
►Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
►Check that the power voltage stated on the rating label corresponds to your local electricity supply.
►Do not use a damp hand to unplug the cord to avoid electric shock.
►Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
►Do not drag the cord, or reach to the front plastic end to unplug it.
►Do not squeeze over bend , pull hard, twist the cord and please keep the cord away from heated surfaces.
►Do not carry this appliance by supply cord or use cord as a handle.
►To disconnect, turn all controls to the OFF position, then remove plug from outlet.
►The appliance is only to be used with the power supply unit provided with the appliance.
►The appliance must only be supplied at safety voltage corresponding to the marking on the appliance.

►If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
►Do not use the appliance if abnormal sound is heard.
►Do not massage areas that are swollen, inflamed or covered with skin eruptions.
►Connect the massage chair to a properly grounded outlet.

SAFETY PRECAUTIONS

►This product is designed for personal in-home use. Commercial use will void warranty.
►Do not use the appliance when the upholstery or seat is removed, or when the appliance is not properly installed. This may cause injury or malfunction.
►Do not massage the same area for more than 5 minutes at a time as it may result in excessive stimulation and adverse effects.
►Do not use the appliance in an hour after meal.
►Do not allow children or pets to play around the device, behind the backrest or under the seat to avoid accidental injuries.
►Do not use the device when your body is wet, and please do not operate with wet hands.
►Stop using immediately if you experience any discomfort.
►The appliance is not intended for self diagnosis or self-treatment of conditions that should be managed by a qualified health care provider.
►Please consult your doctor before use if you are pregnant or menstruating.
►The suggested usage duration is 20 minutes.

NAMES AND FUNCTIONS OF PARTS:

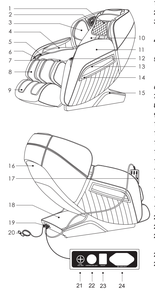

1. Head cushion
2. Bluetooth Speaker
3. Upper arm air pressure component
4. Arm air pressure component
5. Manual controller or mobile phone placement slot
6. USB charging port
7. Seat cushion
8. Leg rest
9. Foot rest
10. Backrest
11. Armrest
12. Handrail shortcut key
13. Embedded lamp
14. Handrail decoration
15. Side cover
16. Back cover
17. Manual controller
18. Drive box cover
19. Move pulley
20. Power cord and plug
21. Safety box
22. Wire socket of hand controller
23. Power switch
24. Power line socket

Function

- This product has designed a set of massage manipulator that can walk up and down, four-wheel drive and mute design.
- There are five massage techniques: finger pressing, kneading, tapping, tapping and kneading at same time.
- Equipped with shoulder automatic positioning detection.
- Automatic massage functions: automatic massage includes 12 kinds of automatic massage functions, including comfortable massage, relaxing massage, traction massage, shoulder and neck massage, back and waist massage, whole body massage, Protection of vertebral massage, fatigue recovery, stretching muscles and activating collaterals, beautiful buttock shaping, soothing sleep and full air pressure.
- Equipped with upper body manual massage function (the whole body, fixed pointand local three massage parts are selected, and the speed of each massage manipulation can be adjusted with five speed. In fixed point and local state, the manipulator can adjust the position up and down; When tapping, pressing andpercussion massage, the width of the massage ball can be wide, medium ornarrow.
- Pneumatic massage function three modes and three levels of intensity selection: Body pressure, arm pressure, leg pressure.
- It is equipped with foot roller massage function.
- With leg frame with step-free adjustable function, suitable for different height use.
- With back heat treatment function: carbon fiber as far infrared heat source.
- Under the backrest frame, the backrest adopts slide rail technology to keep the zero space against the deviation wall all the time, so as to save the space tothe greatest extent.
- Backrest frame guide adopts curve guide technology, which completely conformsto the curve of human back, and can enjoy massage from head to thigh.

- Music playback system, 3D Bluetooth speakers are built into left and right upper arms. Usethe Bluetooth function of the smart device to play music wirelessly.
- The left handrail is equipped with five kinds of handrail shortcut keys, such as openkey, calf frame lifting key, automatic mode key, linkage adjusting key andzero gravity key.
- The right handrail is equipped with USB charging function.
- The handrails on both sides are equipped with ice blue atmosphere lamp.
- LCD Color screen controller.
- Shutdown automatic sitting function, manipulator automatic reset function.

Method of usage

LCD: display all massage functions.

1. LCD: Display all massage functions.
2. Power switch: Turn on or off all massage functions.
3. Pause \ run button: Pause or run all massage functions.
4. Timing key: Timing time adjustment
5. Automatic reclining key: There are three automatic reclining modes, which can automatically switchaccording to your own needs.
6. Footrest up key: Adjust footrest up.
7. Automatic massage button: Please refer to page 10 of this manual for details.
8. Air pressure mode key: Turn on/off air pressure massage function (please refer to page 11 of this manualfor details)
9. Manual massage key: Please refer to page 11 of this manual for details.
10. Foot roller key: Please refer to page 11 of this manual for details.
11. Shoulder adjustment key: Manual adjustment of human shoulder position massage finger pressure point.
12. Up key: Adjust backrest frame rise and calf frame drop.
13. Calf frame down key: Adjust calf frame down.
14. Lie down key: Adjust backrest frame to drop and calf frame to rise.
15. Air pressure intensity key: Adjust air pressure intensity function.
16. Heating key: On/off heating massage function.

FEATURES AND PRODUCT HIGHLIGHTS:

Using The Massage Modes

1. Switch power supply on

2. Start to massage
①. Press the power button to start the massage.
②. leg frame and back frame will automatically lie down.Angle, waiting for theselection of massage function (select an automatic function), sitting posture adjustment more than 3 minutes without operation, automatic shutdown and sitting.
③. After selecting the function of automatic mode, the automatic detection of human shoulder position and massage finger pressure point shall be carried out first, and wait for the completion of the detection.
④. If the detected shoulder position is deviated from the actual shoulder position, adjust the upper and lower keys of the shoulder position to the appropriate position.The shoulder position has 10 positions. No shoulder position adjustment within 10 seconds, then automatically enter the massage function.

Button	Description	Display
▲	Move the massage balls upward to a suitable position	
▼	Move the massage balls downward to a suitable position	

Place in a shoulder massage and acupressure point detection process. (manual device screen display shoulder position adjust icon and hear manual device "click" sound, and then key shoulder position which can adjust the position of shoulder), now has 12 can be automatically massage function keys (comfortable massage, massage, traction massage easily, massage neck, back, waist massage whole body massage, protecting vertebral massage, fatigue recovery, relaxes the muscles and stimulate blood circulation, shaping beautiful buttock, a good sleep, full pressure) in any key and enter the massage function (skip step 5).

⑤. Select the massage function, massage.

Massage Modes

-Automatic Massage

Function	Button	Description	Display
Automatic massage	Comfort	Comfort: The most comfortable massage experience.	F1 Auto
	Relax	Easy: the depth of the soft and comfortable massage, relieve body fatigue	F2 Auto
	Stretch	Frame and backrest frame rise and fall, and air pressure massage, and stretch or traction on the leg, remove fatigue, redlore vitality.	F3 Auto
	Pressure	Shoulder & neck: focus on shoulder and neck massage.	F4 Auto
	Activate	Back &waist: to back waist massage focus.	F5 Auto
		Full body massage: deep massage to rejuvenate the body.	A1 Auto
		chiropractic massage: focus on chiropractic massage, relax body and mind.	A2 Auto
		Fatigue recovery: improve the whole body fatigue pain, for the back, limbs to achieve relaxation and improve microcirculation, quickly relieve fatigue.	A3 Auto
	Warm	Meridians massage: dredge meridians, quickly improve the body's microcirculation, enhance immunity.	A4 Auto
		Beautiful buttock model: be aimed at buttock and thigh effective massage, beautify body shape, reduce the accumulation of redundant adipose body.	A5 Auto
		Sleep peacefully massage: through the twelve major health acupoints massage to help the body recuperate balance, quickly improve sleep, improve sleep quality.	A6 Auto
		All pressure: focusing on the whole body pressure massage to fully relax the body, to the depth of the body massage, fully relieve fatigue and pain of the body	A7 Auto

- Upper Body Manual Massage

Function	Button	Massage ball adjustment	Display
Technique	Mode	Shiatsu: speed, width.	
		Knead: speed.	
		Beat: speed, width.	
		Knead pat: speed.	
		Knock: speed, width.	
Speed	Speed	5 speed adjustable.	Speed
Width	Width	The width of the third gear can be adjusted.	Width
Back stretch		Fixed position and spot massage.	H0
		Small area local round trip massage.	H1
		A round trip massage.	H2
	▲	Massage position adjustment (in fixed point and local mode, massage position can be adjusted).	Manipulator uplink
	▼		Manipulator descending

- Pneumatic massage

Function	Button	Description	Display
Air Pressure Mode	Air Pressure	Full pressure: air pressure massage on arms, legs and feet.	Arm Leg Foot
		Arm: air pressure massage with the arm as the focus.	Arm
		Leg: barometric massage for leg, foot.	Leg Foot
Intensity	Intensity	Adjustable in three levels.	Arm Leg Foot

-Foot roller massage

Function	Button	Description	Display
Foot Roller	Foot Roller	Press this button to turn on or off the foot roller massage, and has a weak, medium, dtrong three levels of intensity can be adjusted to close the four states of cycle switching.	Foot Roller

- Heated massage

Function	Button	Description	Display
Heat	Heating	Press this button to turn on or off the back far infrared hyperthermia. Turn on 3 minutes later Have a warm.	

-Pause/start massage button

Function	Button	Description	Display
Pause/Start	❚❚	Press this button in the process of massage, and all massage movements will be suspended urgently when time continues to countdown), and then press this key to resume all before suspension massage.	❚❚

- Adjust Lying Angle

Function	Button	Description
Set Up		Press this button, backrest frame slowly rise, calf frame slowly fall, and issued "a beeping sound"until it reached the top. Press this button again in the process of sitting, then drop sitting immediately.
Lay Down Key		Press this key, backrest frame slowly down, calf frame slowly up, and issued "a beeping sound"until it dtops. Press this key again in lying down process, dtop lying down immediately.
Calf Rise up		Press and hold this button, the calf frame slowly rises, and issue "a beeping sound" until it reaches the top and dtops. Release it and dtop adjusting , press this button, lower leg dtop, release will dtop frame slowlyand issue "a beeping sound" until the end of the adjustment.
Calf Go down		Press this button, lower leg frame slowly, and issue "a beeping sound" until the end of the dtop, release will dtop adjustment.
Lie Down Automatically		Press the button every time to switch one automatic lying mode. There are three modes in total.

-Other manual functions

Function	Button	Description	Display
Timing	Timer	Time adjustment, every time to press will add 5 minutes, can not exceed 30 minutes. If more than 30 minutes return to the minimum time value.	20min

Handrail shortcut keys

The left arm

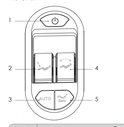

1. Turn on the key: open the massage chair.
2. Calf lift key: adjust the calf up or down.
3. Automatic key: enable automatic massage function.
4. Linkage adjustment key: linkage adjustment backrest frame lifting adjustment.
5. Zero-gravity key: adjust to the zero-gravity Angle of the massage chair.

Function	Description
	Power button: press this button to turn on or off all massage functions.
	Linkage up: press and hold this key to lift the backrest slowly and lower the calf frame slowly. Release it to dtop lifting the backrest or lowering the calf, and the leg will automatically detect the length of the foot.
	Linkage down: press and hold the key to lower the backrest slowly while the calf frame rises slowly. Release the key to dtop the backrest falling or the calf rising, and the leg will automatically detect the length of the foot.
Zero	Zero gravity key: every time you press the key, automatically adjust the position of calf frame and backrest frame to zero gravity position. There are two types of zero-gravity lying mode, which can be rotated.
	Calf up key: lift the key up calf slowly, release will dtop calf up.
	Calf frame down key: press the key down calf frame slowly down, release will dtop calf frame down.
AUTO	Automatic mode key: press each time, automatic massage function switch.

The rightarm

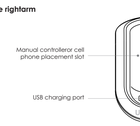

Bluetooth Player Operation

1. Enter the smart device manual and open the Bluetooth function to search the new Bluetooth devices .
2. Find the Bluetooth named like (IMCM-XXXX),choose it to pair with the chair.
3. Turn on the Music Player in the smart device .

Turn off the power and stop massage

- When pressing the power button during the massage, it will stop all the massage functions immediately, the backrest and footrest will go back to the default posit on.And when the massage time up, the massage hand will go back to the default position, all the massage function will stop, the backrest and footrest will not go back to the default position.
- Cut off the power of the whole machine. Figure (switch power off)

PREPARATION BEFORE USE:

The calf installation

1. After connecting the air hose and the wire harness on the calf and the massage chair, untie the fixed line belt and insert the connecting part into the frame. (Figure 1).
2. Place the calf fixing block on the two sides of the round tubes of the calf (Figure 2).



3. Hang the calf of the fixed block on the massage chair frame hook (Figure 3).
4. Then use 4 (each side two pcs) M4 screws to fasten the calf to the massage chair, check whether there is any abnormality, whether the pipeline is folded or not, and finish the installation (Figure 4).



Head cushions and backrest pad

The head cushion allows you to control the intensity of the neck and shoulder massage. You can decide whether to use the head cushion (Recommend to use). The backrest cushion and the backrest is connected by zipper (1). head cushion and the backrest cushion connected by the Velcro as show in the illustration (2).



Floor Protection

- Put the heavy massage chairs on the wood floor for a may damage the floor, so please place a carpet or other object to avoid this damage.

Caution: Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair. During the lifting period, take the calf rest end sealing plate and backrest cover grooves as the force-bearing point!Please do not lift armrest directly.!

Note: During movement you must turn off the power first and then unplug the power cord and the controller cord.

STORAGE AND MAINTENANCE:

Maintenance

- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket loosen.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- If the detachable cord / supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a Hazard.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.

- Don't roll or pull this product above uneven ground. It should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.

TROUBLESHOOTING:

Problems	Possible causes	Actions
Controller is not function properly	The plug and socket is not connected	Check the plug and socket.If they are connected strongly and make sure the switch is turned on
The chair staps without notice	Overheat will make the temperature protector automatically power-off the chair	Use the chair after 30 minutes to avoid overheating
Not working	The plug is in loose connection.	Plug in the socket.
	The switch is on "Off" position.	Switch on the power.
Beeping sound when the massage knots run up and down.	The guide rail is short of lubricating oil after long use.	Apply oil from the right guide rail tank to the side of the guide rail.

If you still have problem with the machine, please contact our customer support team.

SPECIFICATIONS:

Model Number: MGC-A350
Product Name: NAIPO MGC-A350 Massage Chair
Rated Frequency: 50Hz/60Hz
Power Consumption: 120W
Rated Voltage: 220-240V~
Rating Time: 5/10/15/20/25/30 Minutes
Materials: PVC, PA, steel parts and electric & electron parts
Gross/Net Weight: 108/88 kg
Dimension: 120*76*130 cm
Safety Design: Class I

WARRANTY AND CUSTOMER SERVICE:

For questions, assistance, support, or warranty claims, please contact us at the address below that corresponds with your region. Please include your order number and product model number when contacting us.

Vielen Dank für den Kauf des NAIPO MGC-8600 Massagesessels. Bitte lesen Sie dieses Betriebshandbuch sorgfältig durch und bewahren es an einem sicheren Ort für einen späteren Gebrauch auf. Falls Sie Hilfe benötigen, kontaktieren Sie bitte unseren Kundendienst.

WICHTIGE SICHERHEITSHINWEISE

GEFAHR – Zur Risikominderung eines Stromschlages:
Trennen Sie den Massagesessel von der Netzsteckdose unmittelbar nach dem Gebrauch und vor dem Reinigen.

WARNUNG – Zur Risikominderung von Verbrennungen, Feuer, Stromschlag oder Personenschäden:
► Lassen Sie das Gerät niemals unbeaufsichtigt, wenn es mit einer Stromquelle verbunden ist. Trennen Sie das Gerät von der Stromquelle, wenn es nicht in Gebrauch ist und bevor Sie Zubehör aufsetzen bzw. abnehmen.
► Trennen Sie das Gerät von der Stromquelle bei stürmischen Wetterbedingungen wie Donner und Blitz und bevor Sie Zubehör aufsetzen bzw. abnehmen.
► Benutzen Sie niemals das Gerät, wenn das Netzkabel oder -stecker beschädigt, nicht ordnungsgemäß funktioniert, heruntergefallen, beschädigt, oder in Wasser gefallen ist. Bringen Sie das Gerät bitte zu einem Kundencenter zur Untersuchung und Reparatur.
► Vergleichen Sie bitte die geeignete Betriebsnennspannung auf dem Typenschild mit der lokalen Stromzufuhr.
► Entfernen Sie nicht das Netzkabel mit feuchten Händen, um einen Stromschlag zu vermeiden.
► Gebrauchen Sie das Gerät nicht unter einer Decke oder Kissen. Dies kann zu einer Überhitzung führen und Feuer, Stromschlag oder Personenschäden verursachen.
► Ziehen Sie nicht an dem Netzkabel oder greifen das vordere Kunststoffende, um den Netzstecker von der Stromquelle zu entfernen.

- Drücken Sie das Netzkabel weder zusammen noch biegen es, ziehen nicht mit hoher Kraft daran, und halten es bitte von heißen Oberflächen fern.
- Tragen Sie das Gerät nicht indem Sie das Netzkabel als Griff verwenden.
- Zum Ausschalten des Gerätes drehen Sie alle Schalter in die Aus-Position und entfernen dann den Netzstecker von der Netzsteckdose.
- Verwenden Sie das Gerät nur mit der geeigneten Stromzufuhr.
- Betreiben Sie das Gerät nur mit einer sicheren Nennspannung wie auf dem Typenschild angegeben.
- Falls das Netzkabel beschädigt ist, muss es von dem Hersteller oder Kundenservicemitarbeiter oder ähnlich qualifizierten Person ersetzt werden, um jegliche Gefährdung zu vermeiden.
- Verwenden Sie das Gerät nicht, wenn es anormale Geräusche abgibt.
- Massieren Sie nicht mit dem Gerät Stellen, die geschwollen, entzündet oder von Hautausschlägen gezeichnet sind.
- Verbinden Sie den Massagesessel mit einer angemessenen geerdeten Steckdose.

SICHERHEITS VORSCHRITTEN

- Dieses Gerät ist nur für den Privatgebrauch entworfen. Ein gewerblicher Gebrauch ist nicht von der Garantie eingeschlossen.
- Die maximale Gewichtsbelastung beträgt 120 kg.
- Verwenden Sie das Gerät nicht, wenn die Polsterung oder Sitz entfernt ist oder, wenn das Gerät nicht ordnungsgemäß montiert ist, da dies zu Verletzungen oder Fehlfunktionen führen kann.
- Massieren Sie nicht dieselbe Stelle für mehr als 5 Minuten, da dies zu einer übermäßigen Stimulation und negativen Auswirkungen führen kann.
- Verwenden Sie nicht das Gerät innerhalb 1 Stunde nach einer Mahlzeit.
- Erlauben Sie nicht Kindern oder Haustieren neben dem Gerät, hinter der Rückenlehne oder unter dem Sitz zu spielen, um unbeabsichtigte Verletzungen zu verhindern.

- Verwenden Sie das Gerät nicht, wenn Ihr Körper nass ist und bedienen Sie das Gerät nicht mit nassen Händen.
- Stellen Sie den Gebrauch sofort ein, wenn Sie Unbehagen verspüren.
- Das Gerät dient nicht der Eigendiagnose oder Eigenbehandlung von Erkrankungen, die von qualifizierten Gesundheitsärzten behandelt werden sollen.
- Bitte konsultieren Sie Ihren Haussarzt, falls Sie schwanger sind oder menstruieren.
- Die empfohlene Gebrauchsdauer beträgt 20 Minuten.

Name und Funktion der Komponenten

1. Kopfkissen
2. Bluetooth-Lausprecher
3. Oberarm-Luftdruckkomponente
4. Arm-Luftdruckkomponente
5. Manueller Controller oder Steckplatz für Handyplatzierung
6. USB Aufladeanschluss
7. Sitzkissen
8. Beinauflage
9. Fußstütze
10. Rückenlehne
11. Armlehne
12. Handlauf-Tastenkürzel
13. Eingebettete Lampe
14. Handlauf Dekoration
15. Seitenabdeckung
16. Rückseite
17. Manuelle Steuerung
18. Laufwerkskastenabdeckung
19. Riemenscheibe bewegen
20. Stromanschluss und Stecker
21. Sicherheitsbox
22. Kabelbuchse des Handreglers
23. Stromschalter
24. Steckdose

Funktionsübersicht

- Dieses Gerät besitzt einen Satz Massagemanipulatoren, die sich auf und ab bewegen, 4-Rad Antrieb und lautlose Design.
- Es stehen fünf Massagepositionen zur Verfügung: Fingerdruck, Kneten, Klopfen, gleichzeitiges Klopfen und Kneten.
- Ausgestattet mit automatischer Schulterpositionserkennung.
- Automatische Massagefunktionen: Automatische Massage beinhaltet 12 verschiedenen automatische Massagefunktionen, inkl. angenehme Massage, entspannende Massage, Traktionsmassage, Schulter- und Nackenmassage, Rücken -und Ganzkörpermassage, Ganzkörpermassage, vertebrale Massage, Erholung von Müdigkeit, Muskeldehnung und -aktivierung, Gesäßmassage, beruhigender Schlaf und starker Luftdruck.
- Der Sessel ist mit einer Oberkörper Handmassagefunktion (Ganzkörper, eine bestimmte Stelle oder drei ausgewählte Punkte) ausgestattet; die Geschwindigkeit kann anhand 5 Geschwindigkeitsstufen angepasst werden. Bei der 1-Punkt und 3-Punkt Massage kann der Manipulator die Massageposition hoch und runter bewegen. Bei der Klopf-, Druck- und Schlagmassage kann die Massagebreite auf weit, medium und schmal eingestellt werden.
- Die pneumatische Massagefunktion verfügt über drei Modi und drei Intensitätsstufen; Körperdruck, Armdruck, Beindruck.
- Das Modell ist mit einer Fußrollermassagefunktion ausgestattet.
- Der Beinrahmen ist mit einer stufenlosen Einstellfunktion ausgerüstet, so dass der Gebrauch für Benutzer verschiedener Größen geeignet ist.
- Integrierte Wärmefunktion für den Rücken: Karbonfaser dient als Infrarot-Heizquelle.
- Unter dem Rückenlehnenrahmen befindet sich die Gleitschienentechnologie, die stets einen konstanten Abstand zu der Devialionswand hält, somit höchste Platzersparung erlaubt.
- Der Rückenlehnenrahmen ist mit einer Krümmungstechnologie ausgestattet, die exakt der Krümmung des menschlichen Rückens entspricht und verspricht somit eine perfekte Massage von Kopf bis Oberschenkel.
- Ein Musikabspielsystem ist in der linken und rechten Oberarmstützen integriert. Über die Bluetooth-Funktion eines Smart-Gerätes kann Musik kabellos abgespielt werden.
- Die linke Armlehne ist mit fünf Schnellbedientasten ausgestattet, nämlich Öffnungstaste, Hebetaste des Wadenrahmens, automatische Modus-Taste, Einstellungstaste, und Schwerelosigkeits-Taste.
- Die rechte Armlehne ist mit einer USB-Ladebuchse ausgestattet.
- Beide Armlehnen sind mit einer eisblauen Atmosphärenlampe ausgestattet.
- Eine LCD-Touchscreen-Fernbedienung ist inkludiert.
- Das Modell verfügt über eine automatische Abschaltfunktion und automatische Neustartfunktion.

Anwendungsmethode

1. LCD- Zeigt alle Massagefunktionen
2. Stromschalter- Schalte alle Massagefunktionen ein oder aus
3. Pause / Ausführen-Knopf- Pausiere oder führe alle Massage Funktionen aus
4. Zeitschlüssel- Zeiteinstellung
5. Automatische Liegepositionstaste- Es gibt drei automatische Liegepositionen, welche sich automatisch an Ihre eigenen Bedürfnisse anpassen.
6. Fußstütze Aufwärtstaste- Hebt die Fußstütze nach oben
7. Automatischer Massageknopf- Bitte gehen Sie für weitere Details auf Seite 10 dieser Bedienungsanleitung
8. Luftdruckmodus Taste- Schalten Sie die Luftdruckfunktion ein/aus (bitte gehen Sie für weitere Details auf Seite 11 dieser Bedienungsanleitung)
9. Manuelle Massage Taste- Bitte gehen Sie auf Seite 11 für weitere Details in dieser Bedienungsanleitung
10. Fußrollentaste- Bitte gehen Sie auf Seite 11 für weitere Details in dieser Bedienungsanleitung
11. Schulterpositionstaste- Manuelle Einstellung der Position für die Fingermassagepunkte für Ihre Schulterposition
12. Nach oben Taste- Stellen Sie den Rückenlehnenrahmen so ein, dass er nach unten geht und den Kissenrahmen so, dass er nach oben geht.
13. Fußstütze nach unten Taste- Stellen Sie die Fußstütze nach unten ein
14. Nach unten liegen Taste- Stellen Sie die Rückenlehne nach unten und die Fußstütze nach oben.
15. Luftdruckintensitätstaste- Stellen Sie die Luftdruckintensität ein
16. Heizungstaste- Ein/Aus der Heizfunktion

Verwendungsmethode

1. Schalten Sie die Stromzufuhr ein



2. Massage starten
①. Drücken Sie den Einschaltknopf um die Massage zu starten.
②. Beinstütze und Rückenlehne legt sich automatisch zurück und wartet auf Ihre Massageerstellung (wählen Sie eine automatische Funktion). Sitzhaltung Einstellung über 3 Minuten ohne Betrieb, automatisches Abschalten.
③. Nachdem Sie die den automatischen Modus gewählt haben, sollte die automatische Erkennung Ihrer Schulterposition und die Positionierung der Massagekräfte als erstes ausgeführt werden. Warten Sie bitte bis die Erkennung und Positionierung vollständig abgeschlossen ist.
④. Wenn die Schulterposition des Sessels von Ihrer abweicht, können Sie die Position manuell anpassen mithilfe der hoch/runter Tasten auf der Bedienung. Es gibt 10 verschiedene Schulterpositionen. Die Einstellung benötigt etwa 10 Sekunden und startet anschließend automatisch die Massage.

Button	Beschreibung	Anzeige
▲	Bewegt die Massagekräfte nach oben zur gewünschten Position	
▼	Bewegt die Massagekräfte nach unten zur gewünschten Position	

Schalten Sie einen Schultermassage und Akupressurpunkterkennung Prozess ein. (manueller Gerätebildschirm zeigt die Schulterpositionseinstellung an und Sie hören einen „klick". Jetzt können Sie die Schulterposition manuell einstellen.) Es gibt insgesamt 12 automatische Massagefunktionen. (Überspringen Sie Schritt 5).
5. Wählen Sie eine Massagefunktion

Automatische Massage

Funktion	Taste	Beschreibung	Anzeige
Automatische Massage	Comfort	Komfort: Die meist komfortable Massagerfahrung	F1 Auto
	Relax	Leicht: Die Tiefe einer weichen und komfortablen Massage. Lindert Körpermüdigkeit	F2 Auto
	Stretch	Ramen und Rückenlehne ähegt und strkt; Luftdruckmassage, dehnen oder drücken der Beine. Lindert Müdigkeit, Vitalität wird wieder hergestellt	F3 Auto
	Pressure	Fokus auf Schulter und Nacken	F4 Auto
	Activate	Fokus auf Rücken und Hüfte	F5 Auto
		Ganzkörpermassage: tiefe Massage zur Erfrischung des Körpers	A1 Auto
		Chiropraktik-Massage: Fokus auf Chiropraktik-Massage, entspannt Körper und Seele	A2 Auto
		Müdigkeitsregeneration: Lindert Körpermüdigkeit, für den Rücken und Gliedmaßen zur Entspannung und zur Verbesserung der Mikrozirkulation, schnelle Linderung gegen Körpermüdigkeit	A3 Auto
	Warm	Meridiane Massage: schnelle Verbesserung der Mikrozirkulation. Stärkung des Immunsystem	A4 Auto
		Gesäßmassage: Gezielte Massage für Gesäß und Schenkel, reduziert die Anhäufung von überflüssigem Fettkörchen	A5 Auto
		Schlafmassage: durch die zwölf Haupt Akupunkturmasage zur Gewinnung des Körper Gleichgewicht, schnelle Schlafverbesserung	A6 Auto
		Vollduckmassage: Fokus auf eine Vollduckmassage des ganzen Körpers um den ganzen Körper zu entspannen, Lindert Körpermüdigkeit	A7 Auto

- Manuelle Massage für den Oberkörper

Funktion	Taste	Massagekopf Einstellung	Anzeige
Technik	Mode	Shiatsu: Geschwindigkeit, Breite	
		Kneten: Geschwindigkeit	
		Schlagen: Geschwindigkeit, Breite	
		Kneten: Geschwindigkeit	
		Klopfen: Geschwindigkeit, Breite	
Geschwindigkeit	Speed	5 Geschwindigkeitseinstellungen	Speed
Breite	Width	Die Breite des dritten Getriebes kann angepasst werden	Width
Nackenbrauz		Festte Position und Punktmassage	H0
		Kleine lokale Rundmassage	H1
		Rundmassage	H2
	▲	Massageposition Einstellung (in festter Position und Lokalbetrieb, Massageposition kann angepasst werden)	Manipulator uplink
	▼		Manipulator descending

- Pneumatische Massage

Funktion	Taste	Beschreibung	Anzeige
Luftdruckmodus	Air Pressure	Voller Druck: Luftdruckmassage an Armen, Beinen und Füßen	Arm Leg Foot
		Arm: Luftdruckmassage mit Fokus auf Arme	Arm
		Bein: Luftmassage für Beine und Füße	Leg Foot
Intensität	Intensity	Einstellbar in drei Stufen	Arm Leg Foot

- Beinroller Massage

Funktion	Taste	Beschreibung	Anzeige
Fußroller	Foot Roller	Drücken Sie diese Taste um die Fußrollermassage ein oder auszuschalten. Es gibt eine weiche, mittlere und starke Intensität.	Foot Roller

- Geheizte Massage

Funktion	Taste	Beschreibung	Anzeige
Hitze	Heating	Drücken Sie diese Taste um die Ferninfrarot Hyperthermie ein oder auszuschalten. Sie spüren die Wärme ca. 3 Minuten nach dem Einschalten.	

- Pause/Start Massage Taste

Funktion	Taste	Beschreibung	Anzeige
Pause/Start	❚❚	Drücken Sie die Taste während der Massage um alle Massage Bewegungen abzubrech